


ELECTRIC FAN

Midea

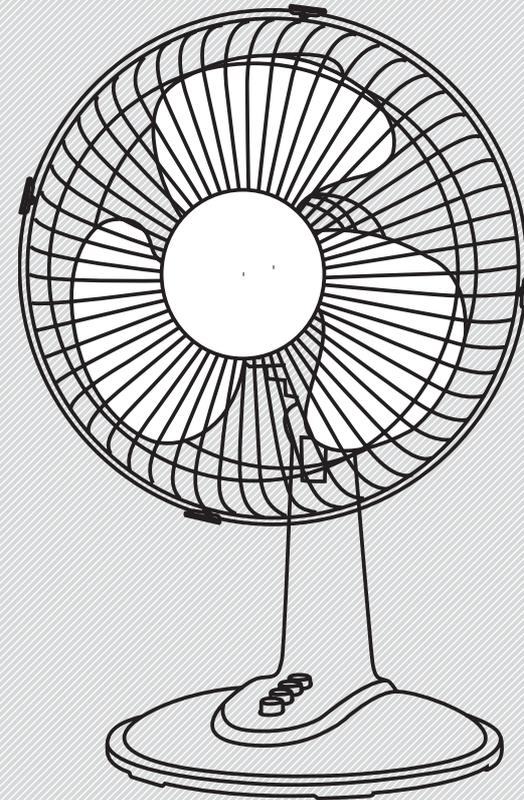

OWNER'S MANUAL

12" Desk Fan

MODEL: FT30-8HC

READ AND SAVE THESE INSTRUCTIONS

Attention: Pictures in the IM are for reference only.

GD Midea Environment Appliances MFG.CO.,Ltd.

Midea Industrial Park, Dongfu Road, Dongfeng Town, Zhongshan, Guangdong,
528425, P.R.China

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING


1. If the supply cord is damaged, it must be replaced by manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Young children should be supervised to ensure that they do not play with the appliance.
4. When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
5. Keep electrical appliances out of reach from Children or infirm persons. Do not let them use the appliances without supervision.
6. When the fan was assembled, the rotor blade guard shall not be taken off anymore
 - Prior cleaning unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grille when fan is running.
2. Disconnect fan when moving from one location to another.
3. Be sure fan is on a stable surface when operating to avoid overturning.
4. DO NOT use fan in window, rain may create electrical hazard.
5. Household use only.

PART FIGURE

1. Front grill
2. Blade
3. Plastic nut
4. Rear grill
5. Motor shaft
6. Oscillating clutch knob
7. Pedestal
8. Spinner
9. Base
10. Piano switch
11. Tight
12. Loose

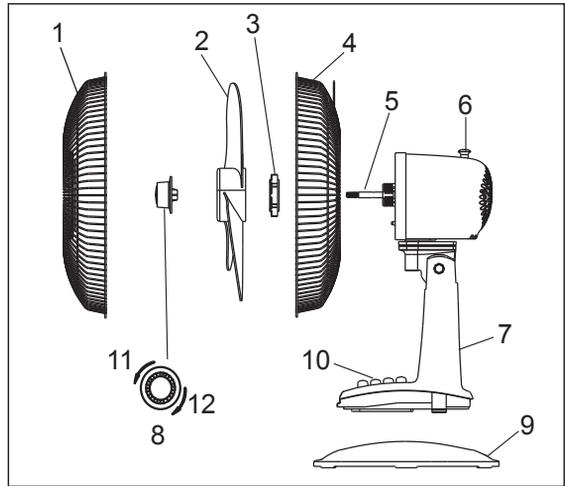




Note: All the pictures in this manual are for explanation purpose only. Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

ASSEMBLY OF BASE

1. Detach screw from base of the fan.
2. Match locking tab to base and click into position.
3. Tighten the screw in the base to secure the fan to the base.

GRILL & FAN BLADE ASSEMBLY

1. Unscrew the spinner clockwise (or take the spinner out from the bag) and the plastic nut counterclockwise to remove both of them. Fix the rear grill to the motor then tighten the plastic nut again. (Fig. 1)
2. Insert the blade into shaft, and make sure the rotor shaft pin is fitted into groove of the blade. Turn the spinner counterclockwise to tighten the blade. (Fig. 2)
3. Fasten the front grill and the rear grill by the grill clip. (Fig. 3)

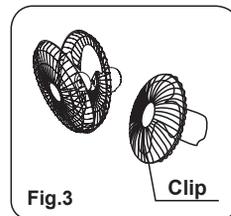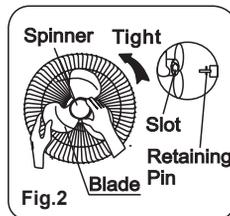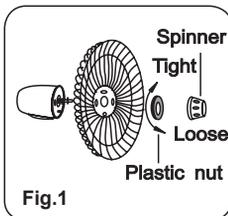

OPERATION INSTRUCTION

Speed control:

Speed is controlled by the piano switch. (-0 -1 -2 -3)

0-off 1-low 2-medium 3-high

Oscillation control:

To make the fan oscillate, push down on the oscillating clutch knob located on the top of the motor housing.

To stop the fan down from oscillating in the position desired, push on the oscillating clutch knob once more.

Tilting control:

To adjust the air flow upward or downward, push the grilles lightly to the desired direction.

MAINTENANCE INSTRUCTION

The fan requires little maintenance. Do not try to fix it by yourself. Refer it to qualified service personnel if service is needed.

1. Before cleaning and assembling, fan must be unplugged.
2. To ensure adequate air circulation to the motor, keep vents at the rear of the motor free of dust. Do not disassemble the fan to remove dust.
3. Please wipe the exterior parts with a soft cloth soaking a mild detergent.
4. Do not use any abrasive detergent or solvents to avoid scratching the surface.
Do not use any of the following as a cleaner: gasoline, thinner.
5. Do not allow water or any other liquid into the motor housing or interior parts.

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with a soft cloth moisten with mild soap.
Thoroughly remove soap film with dry cloth.